



How to set up room defaults with hardware and colours

Learn how to efficiently manage your cabinet component settings, including exterior colors and material specifications. This guide helps you navigate the configuration menu to apply custom product sizes and gap defaults for your project.

1 Click the Edit Defaults icon.

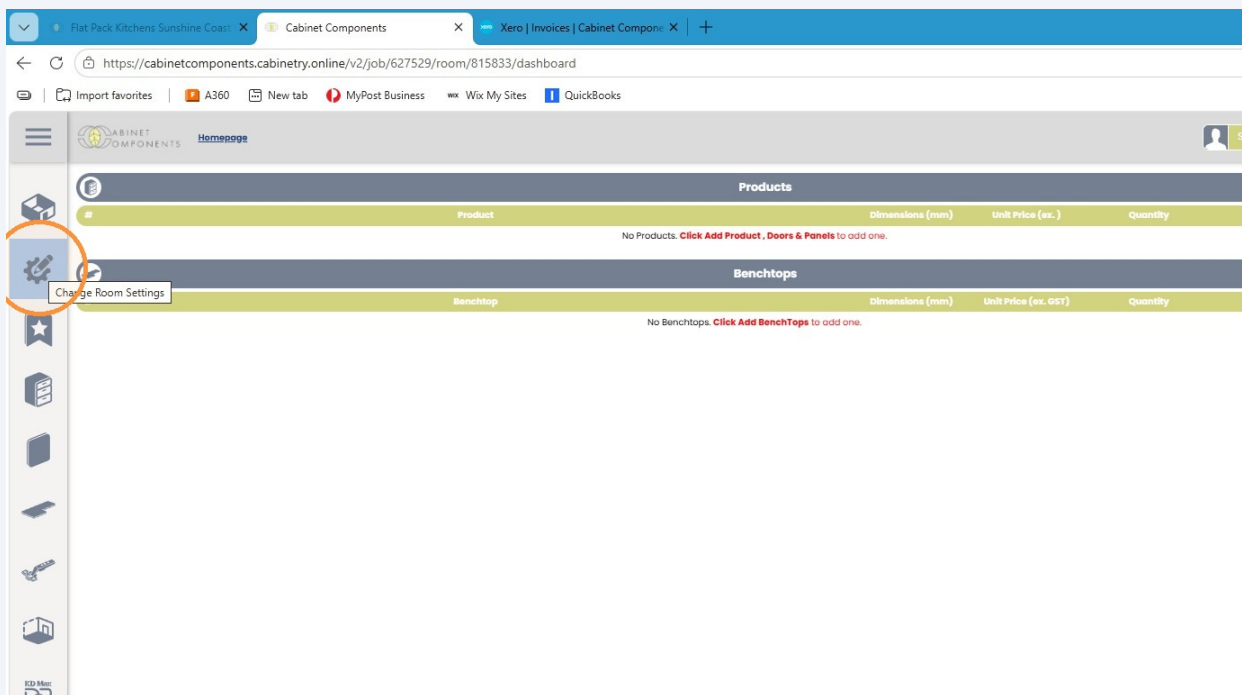


2 Click OK on the unavailable options dialog if this shows up.

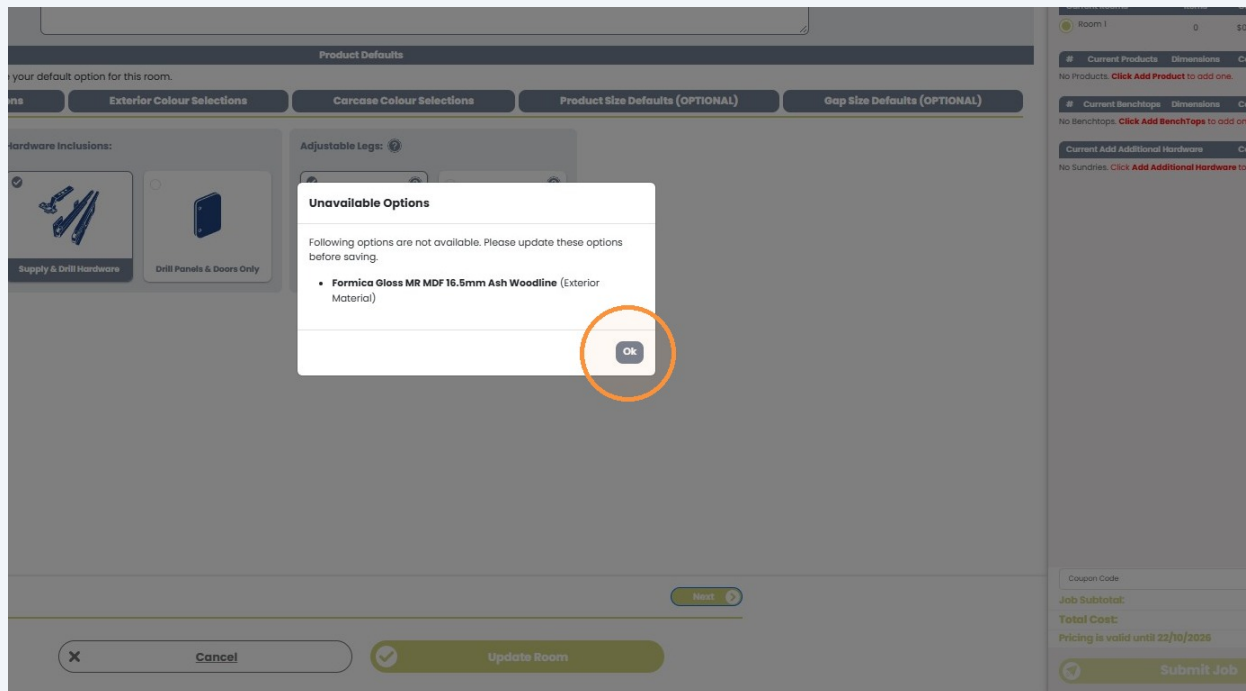

Room Configuration

3 Open Hardware Selections.

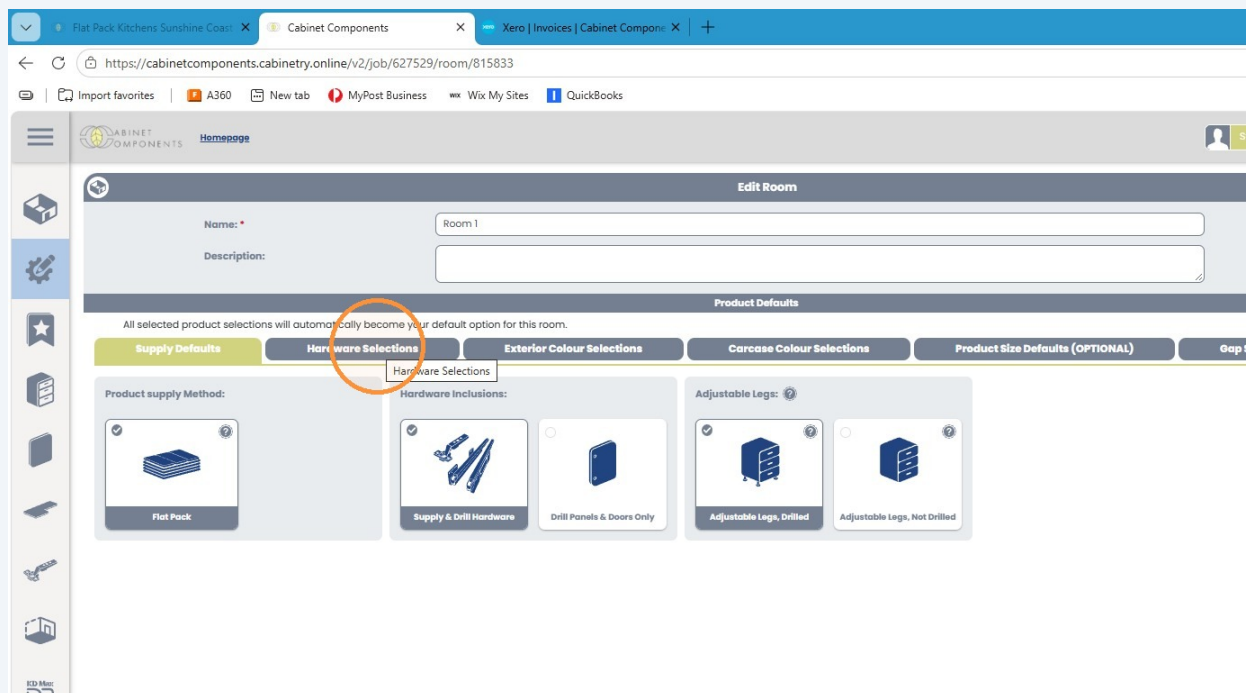

- 4 Here you can choose the brand of hardware by selecting the drop down arrow.

Product Defaults

atically become your default option for this room.

Hardware Selections Exterior Colour Selections Carcase Colour Selections Product Size Defaults (OPTIONAL) Gap Size Defaults (OPTIONAL)

Blum Inserta Soft Close

Blum Antaro 30kg

Previous Next

Cancel Update Room

Coupon Code

Job Subtotal:

Total Cost:

Pricing is valid until 2

- 5 Open the default exterior colour selections dropdown.

Edit Room

Name: * Room 1

Description:

Product Defaults

All selected product selections will automatically become your default option for this room.

Supply Defaults Hardware Selections Exterior Colour Selections Carcase Colour Selections Product Size Defaults (OPTIONAL) Gap Size Defaults (OPTIONAL)

Select your default hinge style: * Blum Inserta Soft Close

Previous Next

Cancel Update Room

Coupon Code

Job Subtotal:

Total Cost:

Pricing is valid until 2

Exterior Colour Setup

6 Click Change Material.

Edit Room

Name: *

Room 1

Description:

Product Defaults

Supply Defaults

Hardware Selections

Exterior Colour Selections

Carcase Colour Selections

Product Size Defaults (OPTIONAL)

Gaps

Door and Drawer Style

Material

Type : Melamine

Door : Flat Panel

Material : Ash Woodline Gloss - 16.5mm Formica MR MDF

Edge Material : 1mm Ash Woodline Formica Gloss

Horizontal grain

Change Style


Change Material

Quick Search


Previous

Next


7 Open the material selector dropdown.

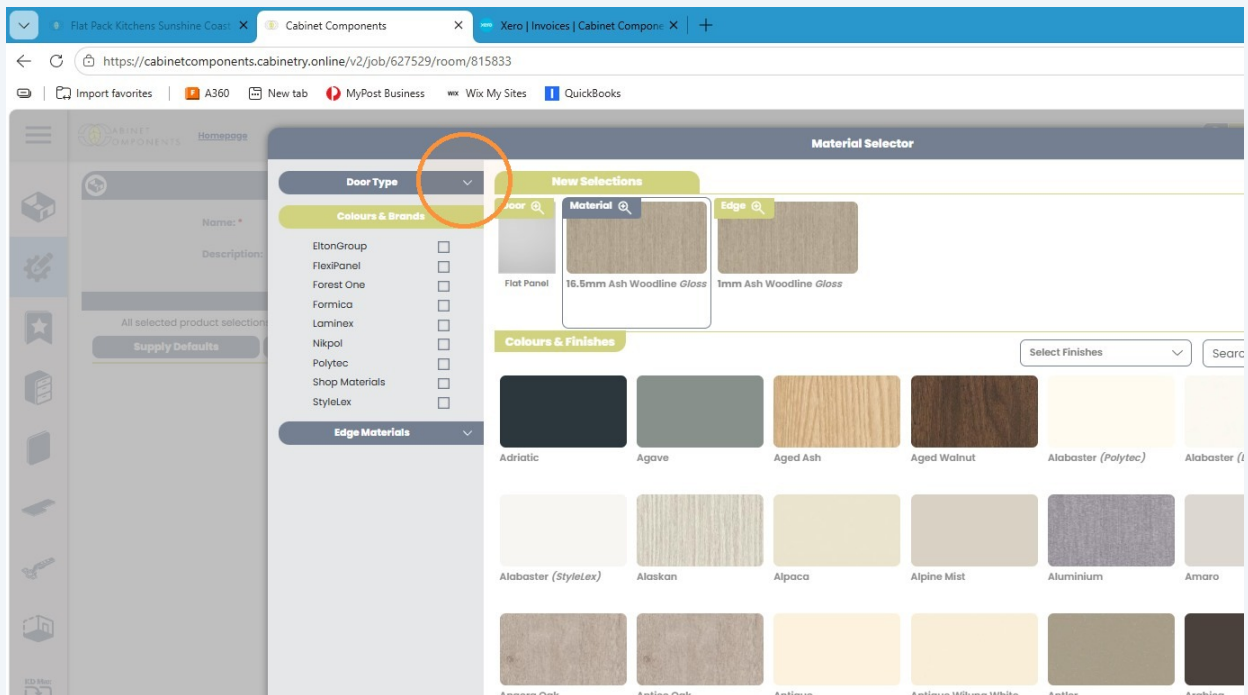


8 Expand the Door Type options and choose your door style, this relate to the material choice in the next selection.

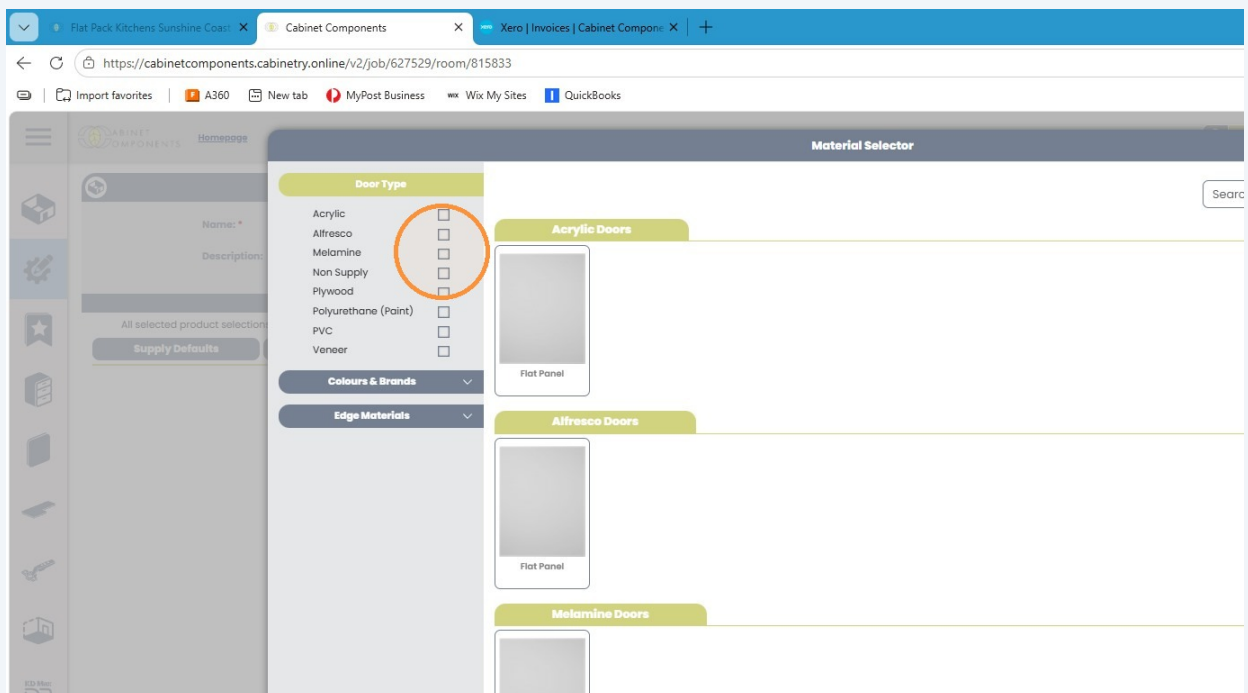


9 Expand Colours & Brands.

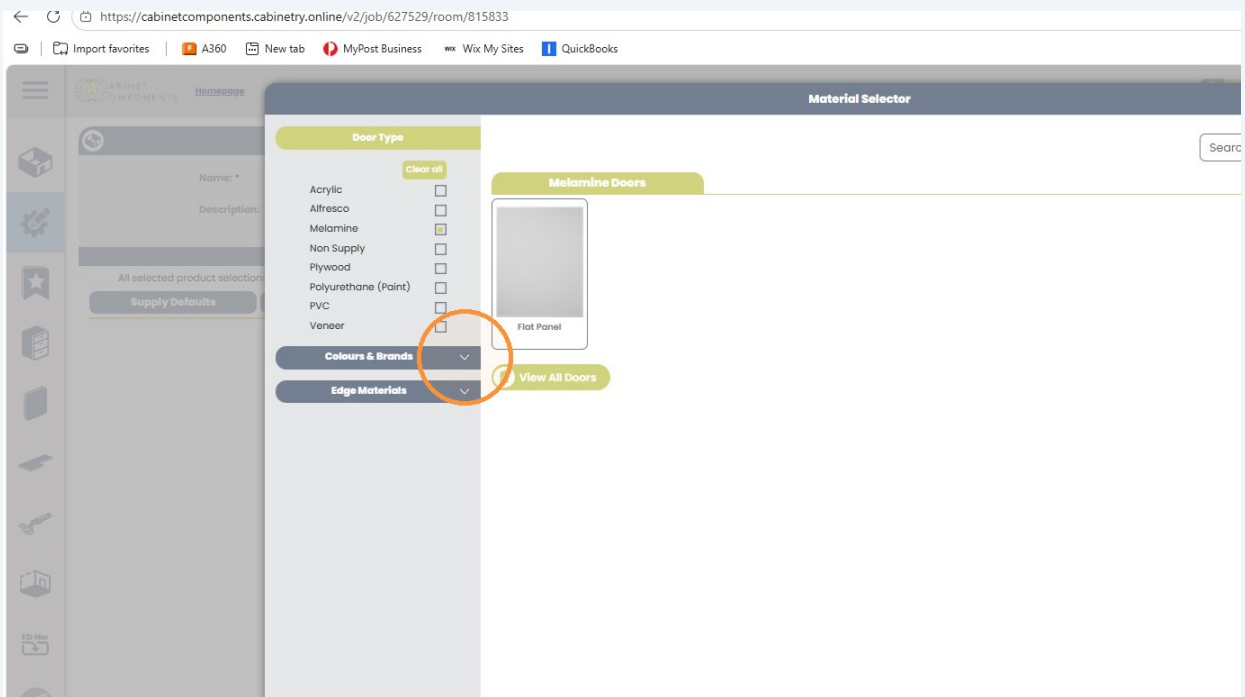


10 Select the Brand type type.

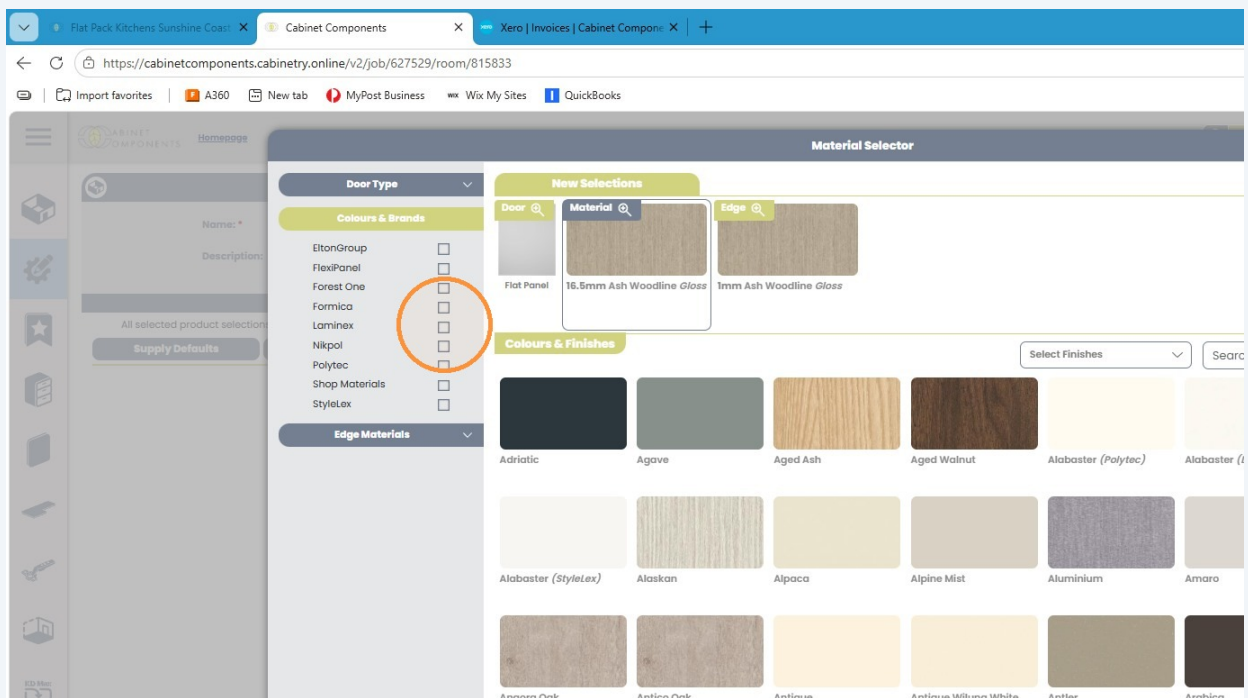


11 Click the Search colours field.

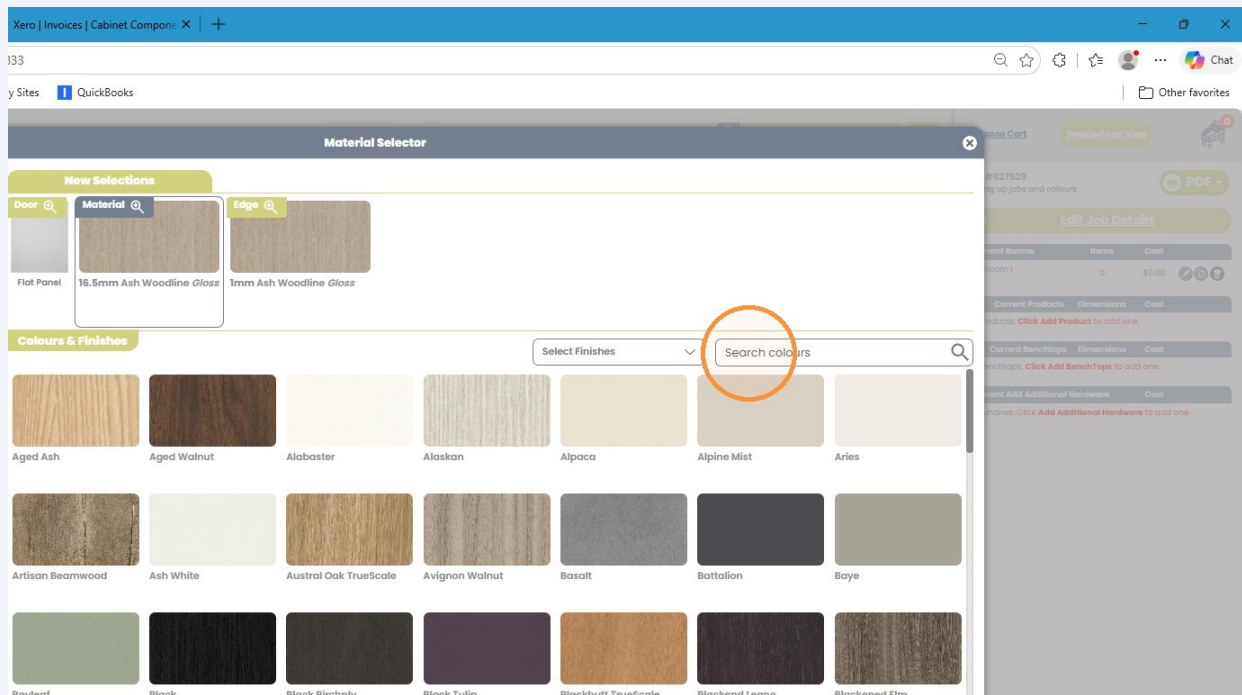


12 Type "the colour" in the Search colours field.

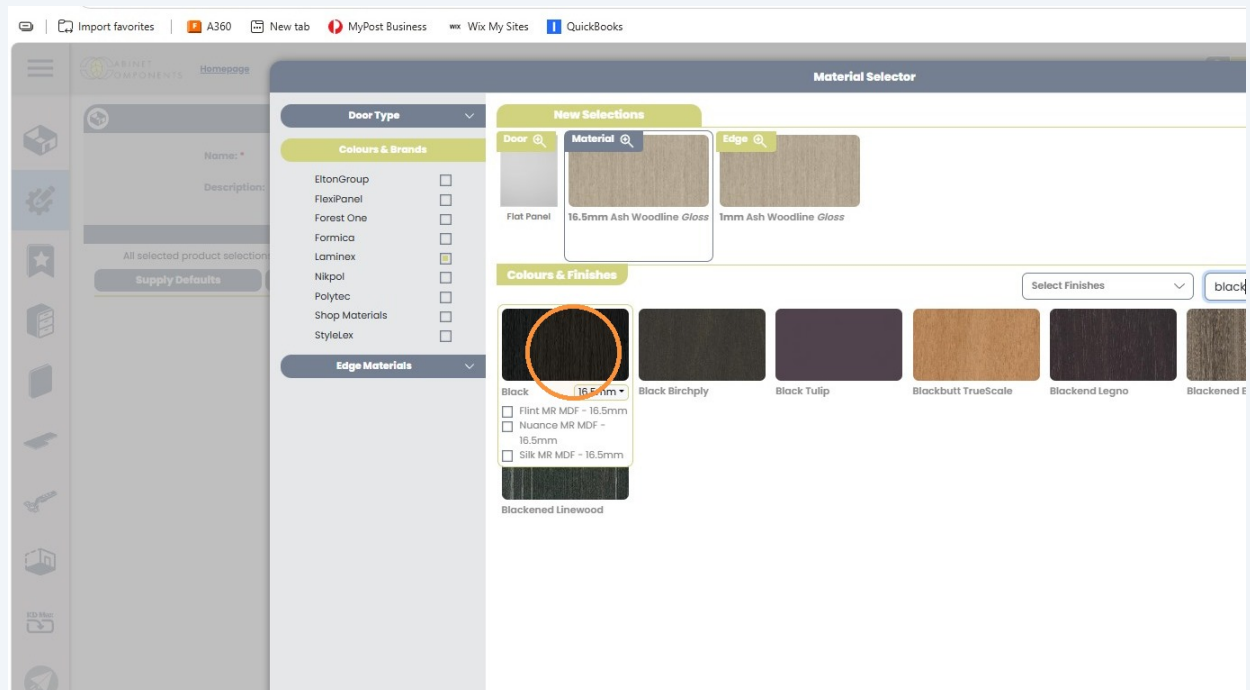


13 Select the thickness option for colour chosen.

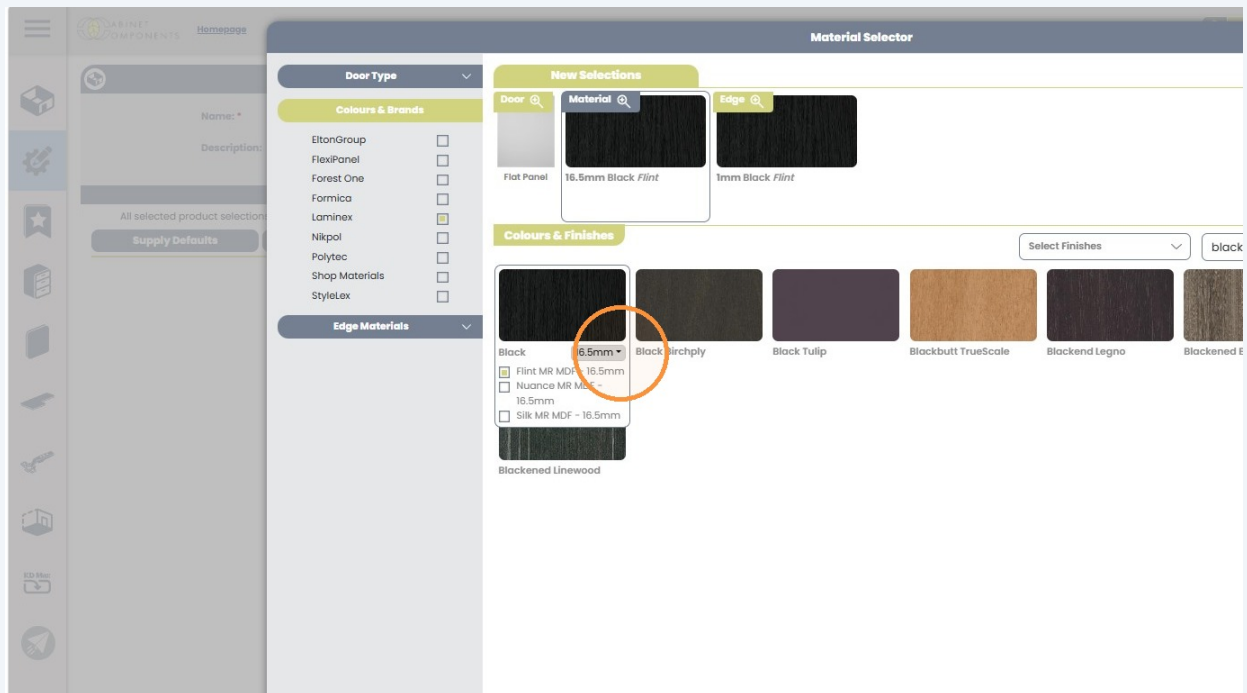


14 here we have selected the 18.5mm option for Black.

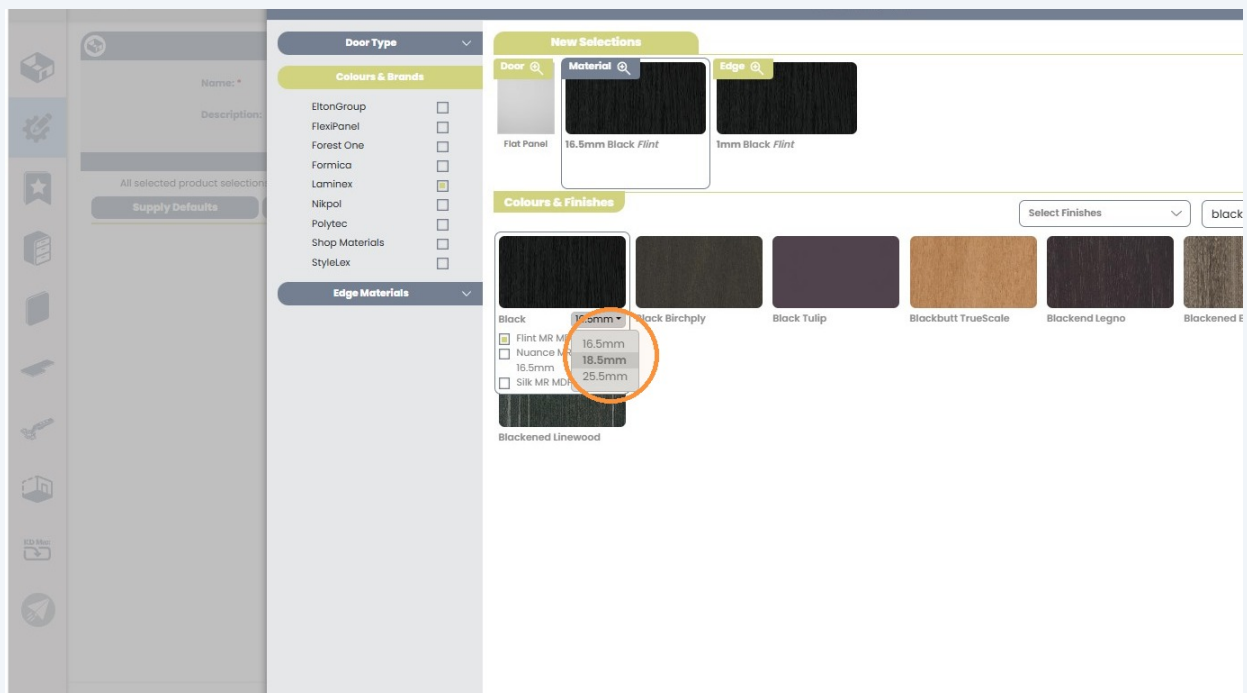


15 Select the Finish option for colour [18.5mm Laminex Black Absolute Grain].

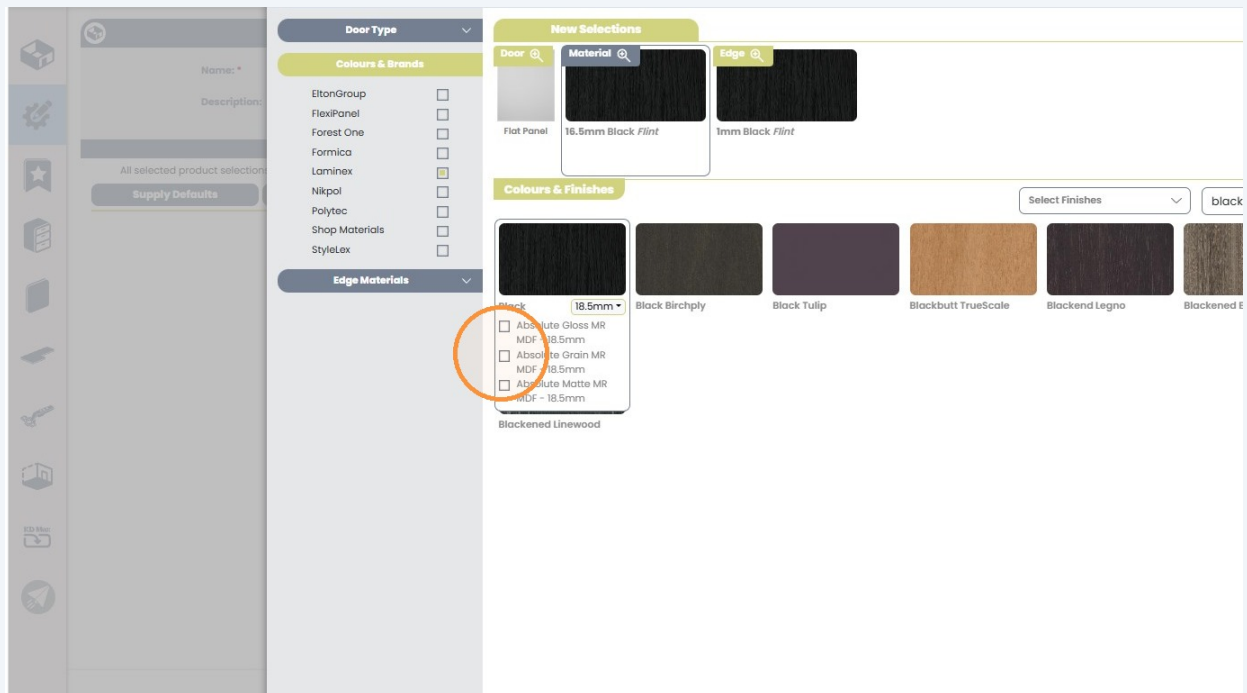


16 Select 18.5mm Black Absolute Grain.

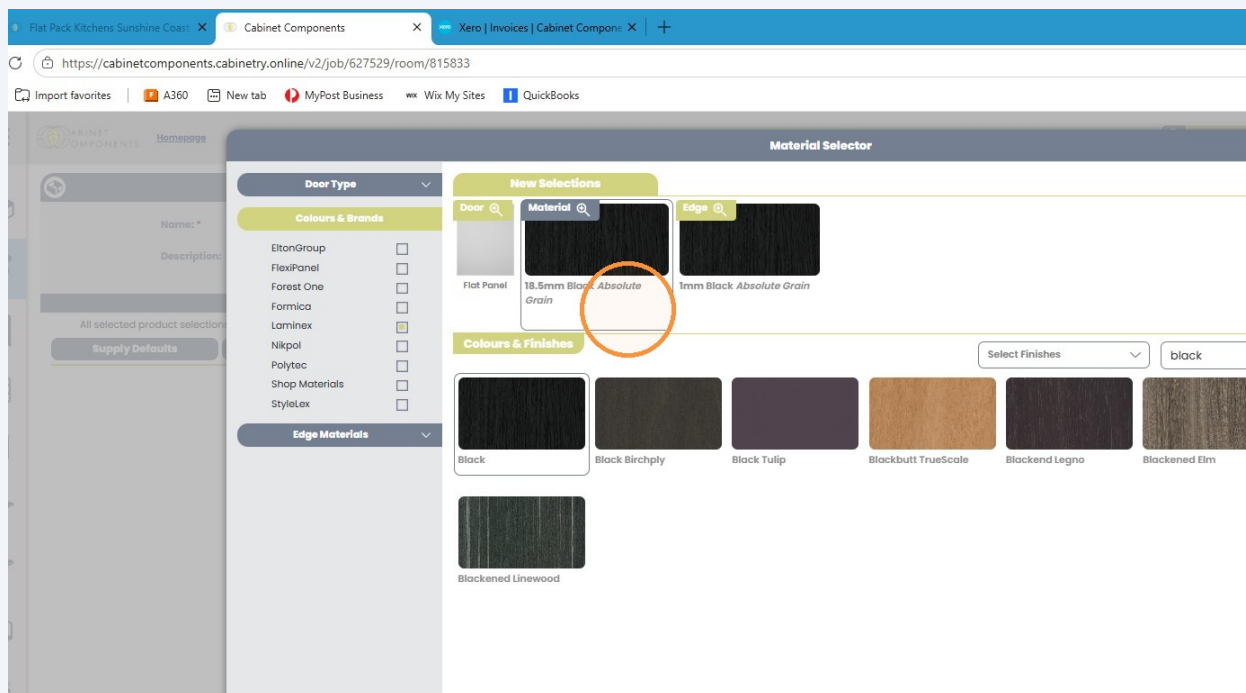

17 Select the edge material and check that it is matching the face colour.

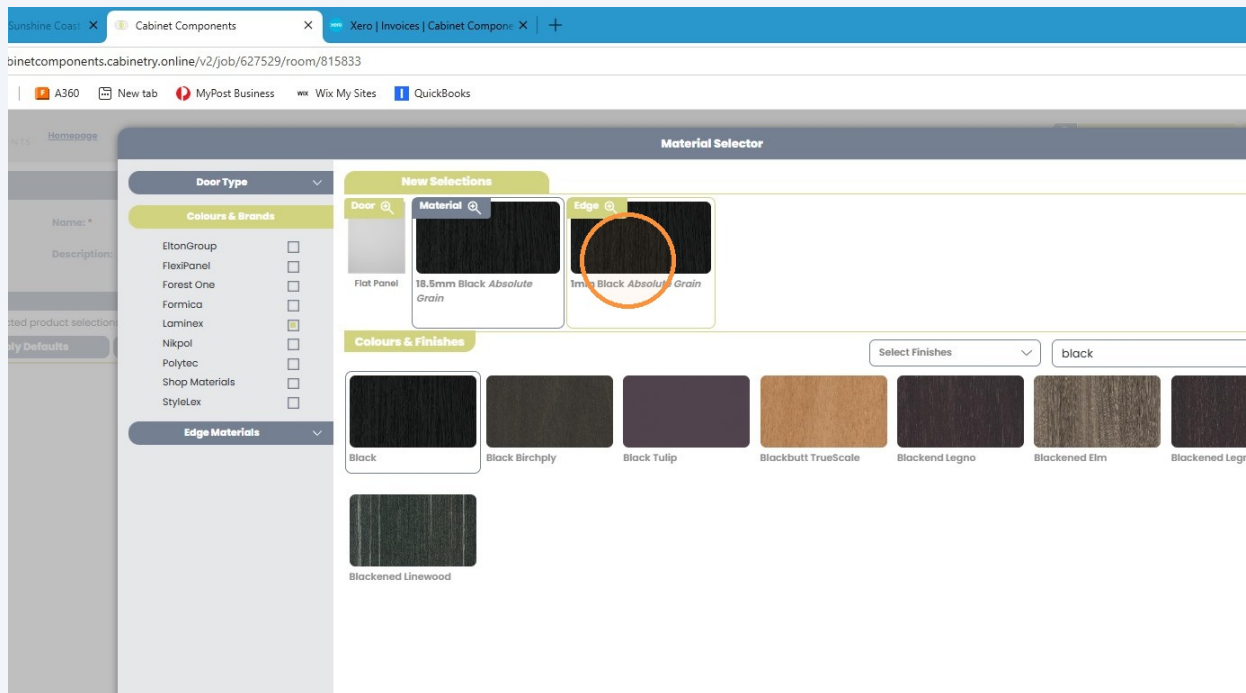

18 Click Apply.

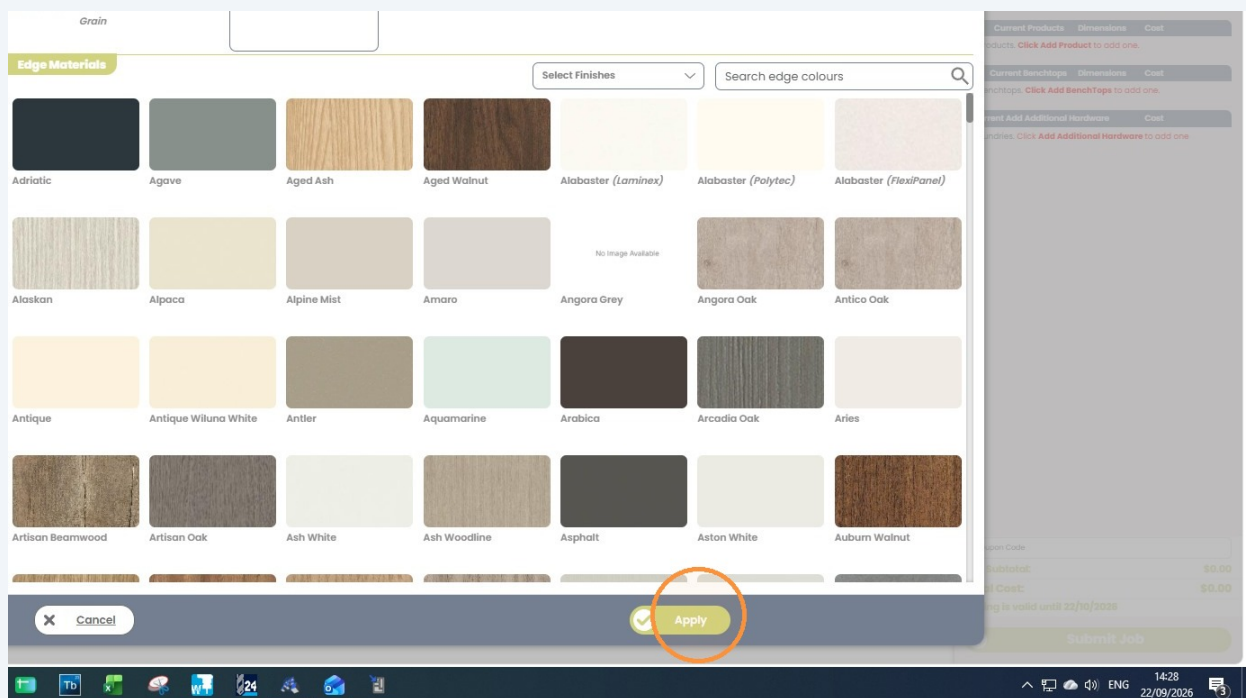

Additional Defaults

19

Open Carcase Colour Selections, this is set for 16mm White HMR with 1mm white edge as standard - you can change internal colour by going through the same steps as previous.

The screenshot shows the 'Edit Room' interface. At the top, there's a navigation bar with tabs for 'Cabinet Components', 'Xero | Invoices | Cabinet Components', and a plus sign. Below this is a breadcrumb trail: 'mponents.cabinetry.online/v2/job/627529/room/815833'. The main header includes 'A360', 'New tab', 'MyPost Business', 'Wix My Sites', and 'QuickBooks'. A user profile 'Steve Denning' is in the top right. The 'Edit Room' section has a 'Name' field with 'Room 1' and a 'Description' field. Below this is the 'Product Defaults' section, which includes a note: 'Product selections will automatically become your default option for this room.' There are five tabs: 'Hardware Selections', 'Exterior Colour Selections', 'Carcase Colour Selections' (highlighted with an orange circle), 'Product Size Defaults (OPTIONAL)', and 'Gap Size Defaults (OPTIONAL)'. The 'Carcase Colour Selections' tab shows a 'Carcase Colour Selections' button. Below this, there are two material selection cards. The first card shows a 'Door and Drawer Style' (light grey) and a 'Material' (dark wood grain). The second card shows a 'Material' (dark wood grain). The text for the second card is: 'Type: Melamine', 'Door: Flat Panel', 'Material: Black Absolute Grain - 18.5mm Laminex MR MDF', 'Edge Material: 1mm Black Laminex Absolute Grain', and a checkbox for 'Horizontal grain'. There are 'Change Style' and 'Change Material' buttons. A 'Quick Search' button is also present.

20

Open Product Size Defaults.

The screenshot shows the 'Edit Room' interface. At the top, there's a navigation bar with tabs for 'Xero | Invoices | Cabinet Components' and a plus sign. Below this is a breadcrumb trail: '7529/room/815833'. The main header includes 'Wix My Sites' and 'QuickBooks'. A user profile 'Steve Denning' is in the top right. The 'Edit Room' section has a 'Name' field with 'Room 1' and a 'Description' field. Below this is the 'Product Defaults' section, which includes a note: 'Product selections will automatically become your default option for this room.' There are five tabs: 'Hardware Selections', 'Exterior Colour Selections', 'Carcase Colour Selections', 'Product Size Defaults (OPTIONAL)' (highlighted with an orange circle), and 'Gap Size Defaults (OPTIONAL)'. The 'Product Size Defaults (OPTIONAL)' tab shows a 'Product Size Defaults (OPTIONAL)' button. Below this, there are two material selection cards. The first card shows a 'Door and Drawer Style' (light grey) and a 'Material' (dark wood grain). The second card shows a 'Material' (dark wood grain). The text for the second card is: 'Type: Melamine', 'Material: White Carcase Available - 16.5mm Shop Materials HMR PB', 'Edge Material: 1mm White Carcase Shop Materials Available', and a checkbox for 'Horizontal grain'. There are 'Change Style' and 'Change Material' buttons. A 'Quick Search' button is also present. On the right side, there's a sidebar with 'Collapse Cart' and 'Detailed cart view' buttons. Below these are sections for 'Job #627529', 'Edit Job Details', 'Current Rooms', 'Current Products', 'Current Benchtops', and 'Current Add Additional Hardware'.

21

You can set the sizes you would like the cabinets to come into the page after selecting the cabinets you would like.

Import favorites | A360 | New tab | MyPost Business | Wix My Sites | QuickBooks

Homepage

Edit Room

Name: * Room 1

Description:

Product Defaults

All selected product selections will automatically become your default option for this room.

Supply Defaults | Hardware Selections | Exterior Colour Selections | Carcase Colour Selections | **Product Size Defaults (OPTIONAL)** | Gap Size Defaults (OPTIONAL)

Product Size Defaults:

- Product Size Defaults: Standard
- Toe Kick Height: 150 mm
- Shelf Setback: 5 mm
- Base Carcase Height: 720 mm
- Base Carcase Depth: 560 mm
- Upper Carcase Height: 700 mm
- Upper Carcase Depth: 300 mm
- Tall Carcase Height: 2100 mm
- Tall Carcase Depth: 590 mm

3D Cabinet Diagram Dimensions:

- Height: 2100 mm
- Depth: 590 mm
- Base Depth: 560 mm
- Upper Depth: 300 mm
- Upper Height: 700 mm

22

Click "Gap Size Defaults (OPTIONAL)" You can adjust the margins you would like [these can be changed on each cabinet manually as you bring them into the order]

Xero | Invoices | Cabinet Components | +

133

My Sites | QuickBooks

Steve Denning

Edit Room

Product Defaults

Exterior Colour Selections | Carcase Colour Selections | Product Size Defaults (OPTIONAL) | **Gap Size Defaults (OPTIONAL)** | Gap Size Defaults (OPTIONAL)

rd 1

3D Cabinet Diagram Dimensions:

- Height: 2100 mm
- Depth: 590 mm
- Base Depth: 560 mm
- Upper Depth: 300 mm
- Upper Height: 700 mm

Job #627529

Setting up jobs and colours

Edit Job Details

Current Rooms

Room	Items	Cost
Room 1	0	\$0.00

Current Products

#	Current Products	Dimensions	Cost
No Products.	Click Add Product to add one.		

Current Benchtops

#	Current Benchtops	Dimensions	Cost
No Benchtops.	Click Add BenchTaps to add one.		

Current Add Additional Hardware

#	Current Add Additional Hardware	Cost
No Sundries.	Click Add Additional Hardware to add one	